

CHANGING FRONT PANEL OF RECYCLING CABINET DOOR

- 1 Remove Drawer front from base of unit by unscrewing the four screws on left and right side of unit. 8 screws total. **Fig. A**
- 2 Lay drawer front flat.
- 3 On the bottom inside of drawer front, remove nut and then unscrew the screw. **Fig. B**
- 4 Slide the current drawer front off and replace with new front panel. **Fig. C**
- 5 Screw the bottom screw in place and replace nut.
- 6 Attach drawer front to drawer with the 4 screws on left and right of drawer.

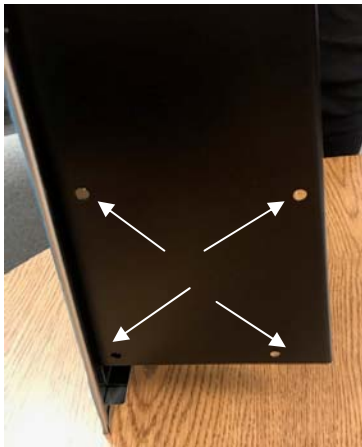


Fig. A



Fig. B

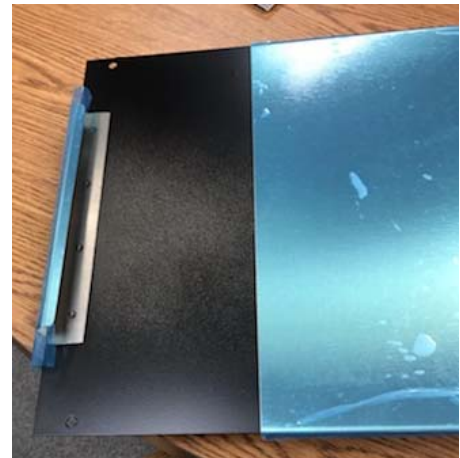


Fig. C